

### Cleaning the Ink Needles

Tech Note Number: 530

Total number of pages: 2


Date: May 15, 2009, 2009

**Applicable Models:** AnaJet FP-125 printer series


If the ink needle itself appears clogged, it may be necessary to clean the needle located in the ink bay, you will need a 2 to 2.5 inch sewing needle, and a needle-nose pliers or a similar clamping device to hold the needle.

Please do the following:

- 1) Remove ink cartridge first, and then the ink tube from the back of the ink bay. This is done by unscrewing the brass fitting where the tube attaches to ink needle

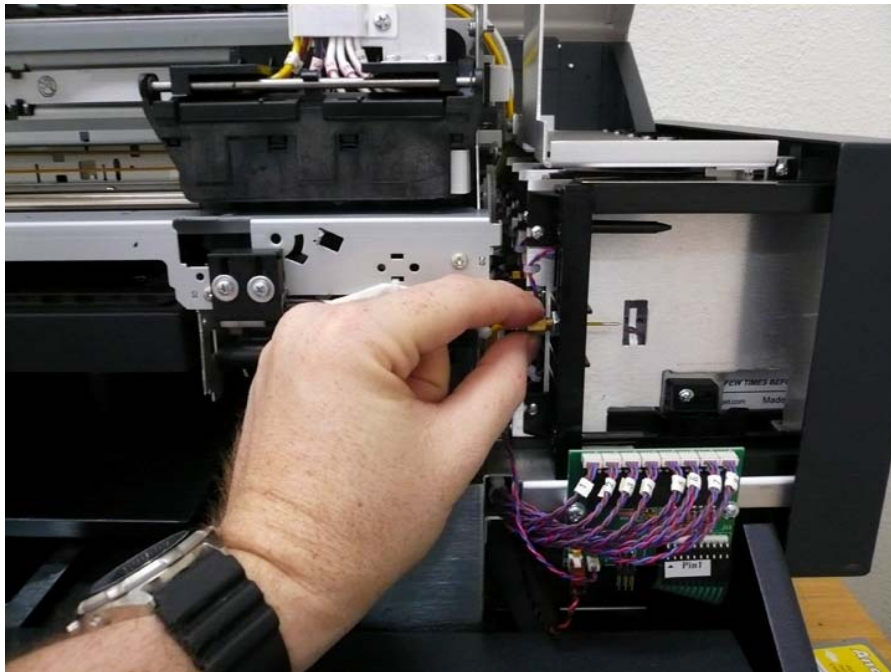

- 2) Place a drop of cleaning solution on the end of the sewing needle and insert it into the back of the ink needle located in the ink bay. Work the sewing needle back and forth, until the ink needle is clear.

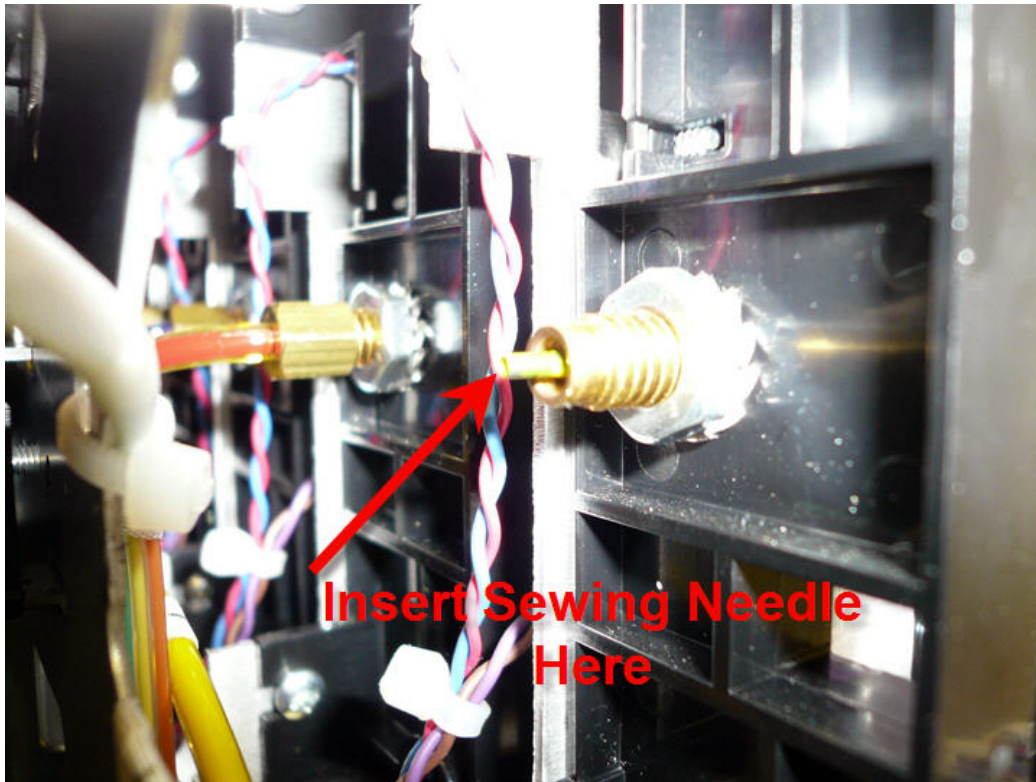

- 3) When finished, replace the ink tube and make sure that the fitting is not screwed on too tight. Finally place the ink cartridge back in the ink bay.